



Contents

- Cisco Cyber Vision 1
 - Installation 1
 - Global Center and Center 1
 - Sensors 1
 - Configuration 3
 - Licensing 3
 - Presets 3
 - Active Discovery 3
 - Baseline 4
 - Upgrade 5
 - Global Center and Local Center 6
 - Knowledge Database 6
 - Integrations 6
 - Analysis 7
 - Presets 7
 - Reports and Events 8
 - Packet Capture 9
- ISA 3000 9
 - Installation 9
 - Hardware Installation 9
 - Software Installation 10
 - Connecting to the Network 10
 - Configuration 10
 - Connection to FMC 10
 - Device Configuration in FMC 10
 - Software Upgrade 13
- Firepower Management Center 14
 - Installation 14
 - Configuration 14
 - Basic Configuration 14
 - Licensing 14
 - Network Objects 14
 - Access Control Policy 15
 - Intrusion Policy 17

File and Malware Policy	18
Preprocessors	19
Network Discovery	19
Hardware Bypass	20
Upgrade	20
Integrations	21
Syslog	21
Analysis	22
Connection Events	22
Intrusion Events	22
Hosts	22
File Events	23
SecureX	24
Troubleshooting	24
Cyber Vision Network Sensor Placement in the Network	24
FTD CLI	24
FMC Access Control Logging and Hit Count	25
FMC Health Monitor	25
Appendix	26
Cisco Catalyst IE 3400 and IE 3300 Configuration Preparation for the Cyber Vision Sensor	
26	
ERSPAN	26
IOx	26
Port Configuration	27
Cisco Catalyst 9300 Configuration Preparation for the Cyber Vision Sensor	27
ERSPAN	27
IOx	28
Port Configuration	28